



INSTALL  
HENRY  
FLASHING  
FLUSH WITH  
ROUGH  
OPENING

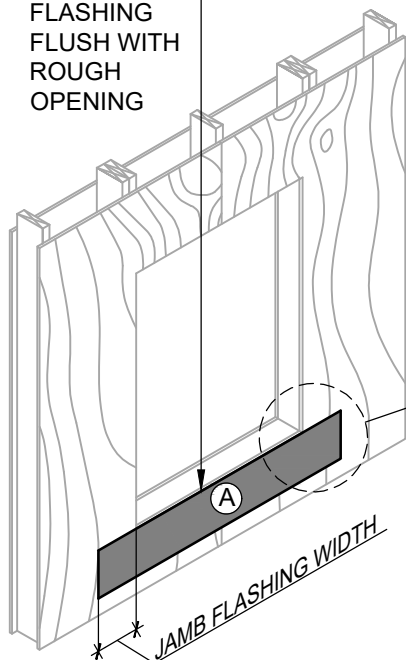


**USE THIS METHOD  
FOR SELF-ADHERED  
SILL FLASHING:**

1. REMOVE RELEASE PAPER AT TOP OF FLASHING AND ADHERE TOP OF FLASHING INTO PLACE
2. LEAVE BOTTOM OF RELEASE PAPER INTACT TO PROTECT ADHESIVE FROM DIRT AND DEBRIS
3. INTEGRATE SILL FLASHING WITH WRB IN STEP #5

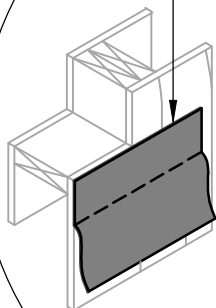

**1 SILL FLASHING  
AND PREPARATION**

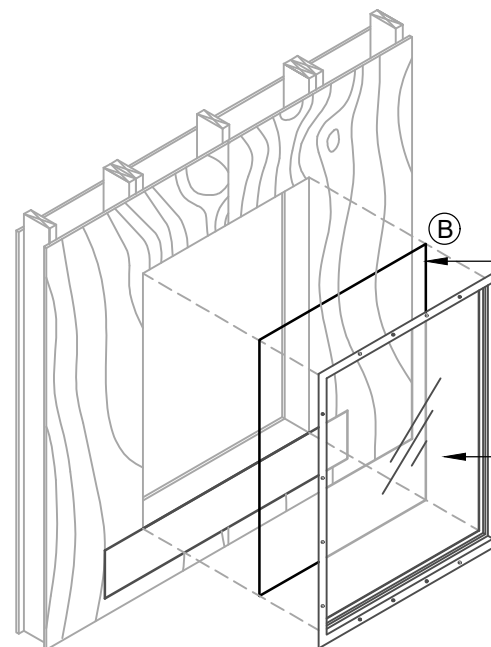

APPLY A  
CONTINUOUS 3/8"  
BEAD OF SEALANT  
ON INTERIOR SIDE  
OF WINDOW FLANGE

INSTALL WINDOW  
PER WINDOW  
MANUFACTURER  
REQUIREMENTS

**2 WINDOW  
INSTALLATION**

**Henry** RESIDENTIAL AND LIGHT COMMERCIAL  
WEATHER-RESISTIVE BARRIER ASSEMBLY

**WEATHER-RESISTIVE BARRIER (WRB) COMPONENTS**

- (A) HENRY SILL FLASHING
- (B) HENRY MOISTOP SEALANT
- (C) HENRY SELF-ADHERED JAMB FLASHING
- (D) HENRY SELF-ADHERED HEADER FLASHING
- (E) HENRY WEATHER-RESISTIVE BARRIER



**FORTIFIBER® 1-2-3 MOISTURE CONTROL SYSTEM  
WEATHER-RESISTIVE BARRIER (WRB)  
INSTALLATION GUIDELINES**



SCAN THE QR CODE FOR  
A VIDEO INSTALLATION.

**NOTES**

1. QUALIFYING HENRY WEATHER-RESISTIVE BARRIER ASSEMBLY INSTALLATIONS MAY BE ELIGIBLE FOR THE 15-YEAR RESIDENTIAL AND LIGHT COMMERCIAL FORTIFIBER 1-2-3 MOISTURE CONTROL SYSTEM WARRANTY. VISIT [WWW.HENRY.COM/WARRANTY](http://WWW.HENRY.COM/WARRANTY) FOR ADDITIONAL INFORMATION.



999 N. Pacific Coast Highway, Suite 800  
El Segundo, CA 90245  
800-486-1278 • [www.henry.com](http://www.henry.com)

**MECHANICALLY ATTACHED WEATHER-RESISTIVE BARRIER  
FLANGED WINDOW - METHOD A**


**WINDOW INSTALLATION FOR LOW WIND AND WATER EXPOSURE  
FLASHING INSTALLED BEFORE WRB**

MANUFACTURER INSTALLATION GUIDELINES ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION. DETAILS ARE NOT TO SCALE. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR PRODUCT INFORMATION, RECOMMENDED AUXILIARY COMPONENTS AND INSTALLATION INSTRUCTIONS.

04-07-2021

PAGE 1 OF 2


**MAWRB-6A**

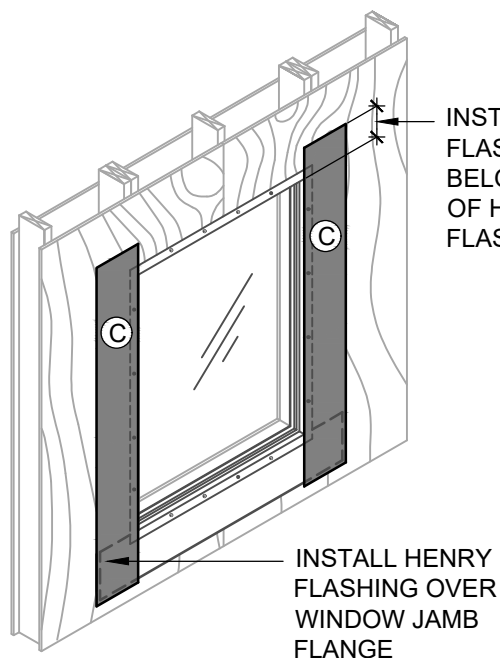

INSTALL HENRY FLASHING 1" BELOW TOP OF HEADER FLASHING

INSTALL HENRY FLASHING OVER WINDOW JAMB FLANGE


### 3 JAMB FLASHING INSTALLATION

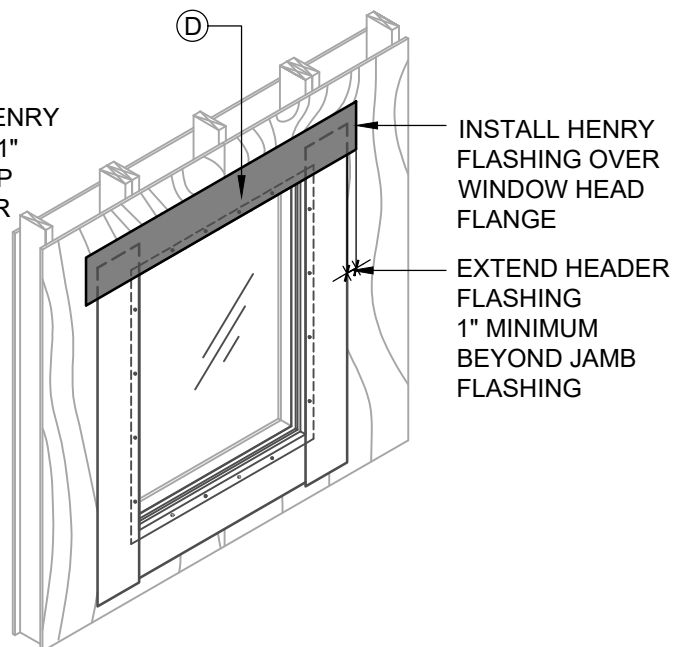

INSTALL HENRY FLASHING OVER WINDOW HEAD FLANGE

EXTEND HEADER FLASHING 1" MINIMUM BEYOND JAMB FLASHING

### 4 HEADER FLASHING INSTALLATION

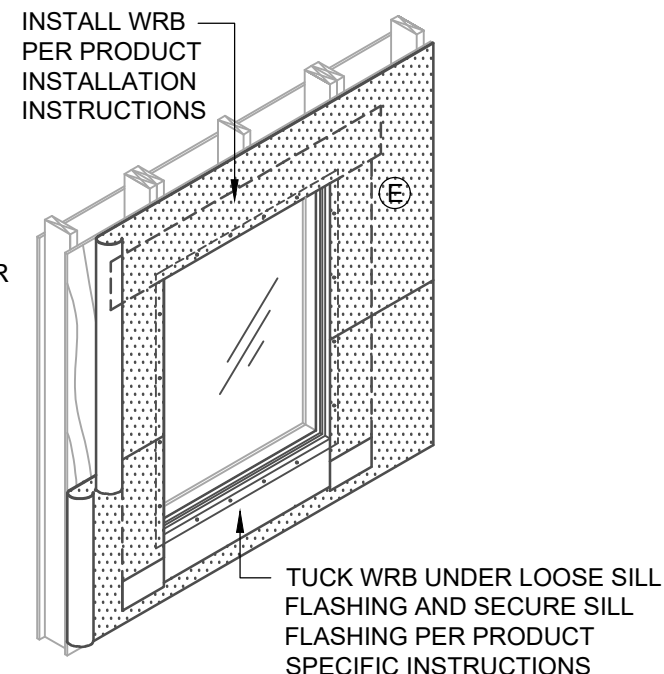

INSTALL WRB PER PRODUCT INSTALLATION INSTRUCTIONS

TUCK WRB UNDER LOOSE SILL FLASHING AND SECURE SILL FLASHING PER PRODUCT SPECIFIC INSTRUCTIONS

### 5 WEATHER-RESISTIVE BARRIER (WRB)

#### INSTALLATION GUIDELINES AND LIMITATIONS

1. INSTALLATION "METHOD A" REFERS TO COMMON WINDOWS (SURFACE MOUNTED). INSTALL WINDOW PER WINDOW MANUFACTURER REQUIREMENTS.
2. SEE PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR ROLL SIZES, MAXIMUM UV EXPOSURE, COMPATIBILITY CONCERNS, APPLICATION TEMPERATURES AND SERVICE TEMPERATURE LIMITATIONS.
3. FLASHINGS MAY NOT BE COMPATIBLE WITH ALL SEALANTS. USE **MOISTOP SEALANT** OR VERIFY COMPATIBILITY AS DIRECTED IN AAMA 713.
4. INSTALLATIONS WITHOUT A DRAINAGE SILL PAN ARE LIMITED TO LOW WIND AND WATER EXPOSURE CONDITIONS.
5. USE EXTERIOR GRADE FASTENERS TO INSTALL AND SECURE THE WEATHER-RESISTIVE BARRIER UNTIL COVERED WITH EXTERIOR CLADDING.
6. SUBSTRATES MUST BE CLEAN AND DRY.
7. SELF-ADHERED FLASHING MAY REQUIRE A PRIMER FOR OPTIMAL ADHESION TO SOME SURFACES AND/OR SUBSTRATE TEMPERATURES.
8. ROLL SELF-ADHERED FLASHING TO OBTAIN CONTINUOUS ADHESION.
9. VERIFY WEATHER-RESISTIVE BARRIER IS FREE FROM PROTRUSIONS OR DAMAGE PRIOR TO CLADDING INSTALLATION.
10. CONTACT HENRY AT 800-773-4777 FOR TECHNICAL ASSISTANCE.

**Henry**

999 N. Pacific Coast Highway, Suite 800  
El Segundo, CA 90245  
800-486-1278 • www.henry.com

#### MECHANICALLY ATTACHED WEATHER-RESISTIVE BARRIER FLANGED WINDOW - METHOD A WINDOW INSTALLATION FOR LOW WIND AND WATER EXPOSURE FLASHING INSTALLED BEFORE WRB

MANUFACTURER INSTALLATION GUIDELINES ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION. DETAILS ARE NOT TO SCALE. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR PRODUCT INFORMATION, RECOMMENDED AUXILIARY COMPONENTS AND INSTALLATION INSTRUCTIONS.

04-07-2021

PAGE 2 OF 2

MAWRB-6A