


INSIDE CORNER (PLAN VIEW)

STRIKE MORTAR FULL AND FLUSH

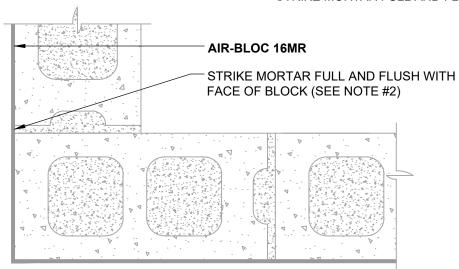

OUTSIDE CORNER (PLAN VIEW)

STRIKE MORTAR FULL AND FLUSH

NOTES:

- DETAIL SHOWS AIR-BLOC 16MR FLUID APPLIED AIR AND VAPOR BARRIER. THIS DETAIL IS FOR CMU SUBSTRATES ONLY. REFER TO AB16MR-3A-1 AND AB16MR-3A-2 FOR OTHER SUBSTRATE FLASHINGS.
- 2. FILL GROUT AND STRIKE CMU JOINTS FULL AND FLUSH TO CREATE A CONTINUOUS SUBSTRATE. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR CURE TIME PRIOR TO AIR BARRIER INSTALLATION.
- INSULATION AND CLADDING NOT SHOWN FOR CLARITY. REFER TO LOCAL CODE ORDINANCES FOR INSULATION AND VAPOR BARRIER REQUIREMENTS.
- 4. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET (TDS) AND **AIR-BLOC 16MR** GUIDE SPECIFICATION FOR INSTALLATION PROCEDURES.



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

AIR-BLOC 16MR FLUID APPLIED AIR AND VAPOR BARRIER

INSIDE/OUTSIDE CORNERS

CONCRETE MASONRY UNITS (CMU) STRIKE MASONRY JOINTS FLUSH SCALE: N.T.S.

03-05-2020

AB16MR-3B

999 N. Pacific Coast Highway, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com