


**AIR-BLOC® MR16 REBATE WINDOW DETAIL GUIDELINES CONSISTS OF TWO PARTS. REFER TO DETAIL AB16MR - 6B1A FOR PREVIOUS STEPS 1-2.**

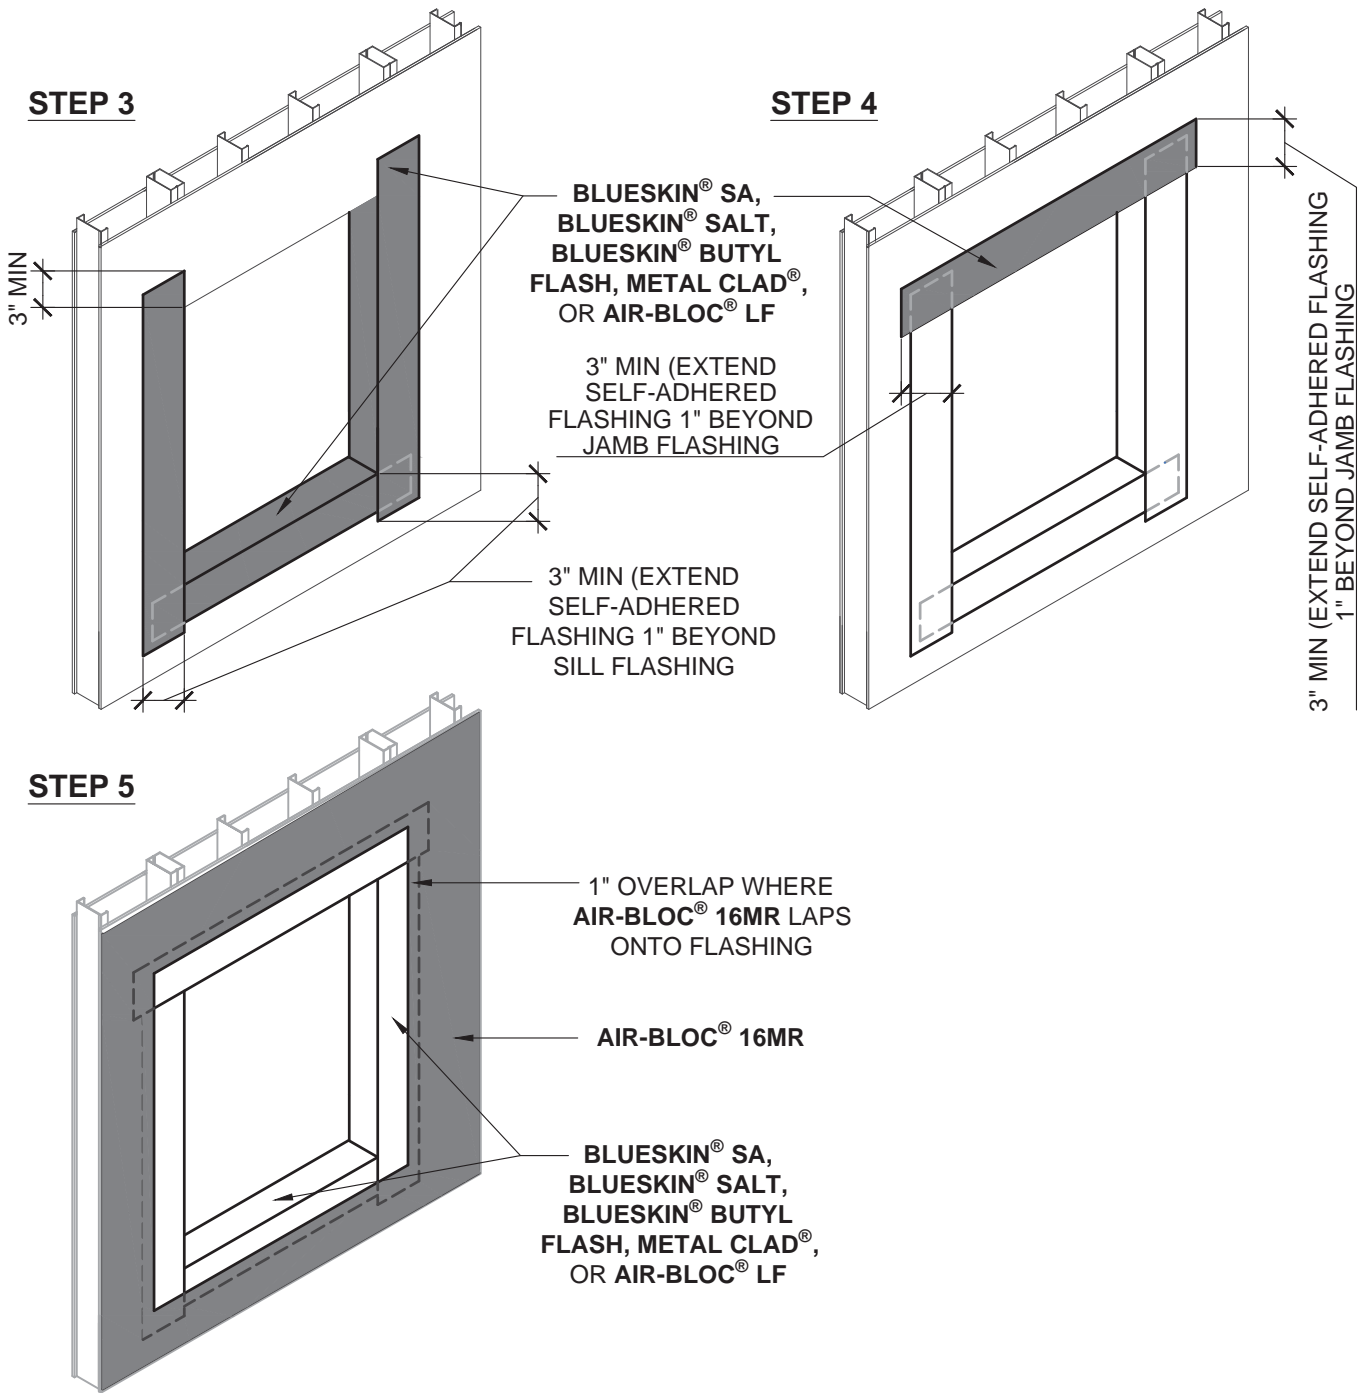

**NOTES:**

1. SEE NOTES ON DETAIL AB16MR - 6B1A.

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY® DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

**AIR-BLOC® 16MR AIR AND VAPOR BARRIER**

**REBATE WINDOW**

METHOD A - AIR-BLOC® 16MR INSTALLED AFTER FLASHING - PART 2 OF 2

SCALE: N.T.S.

10-25-2016

**AB16MR-6B1B**

**Henry®**

999 N. Sepulveda Blvd., Suite 800  
El Segundo, CA 90245  
800-486-1278 • www.henry.com