


### SECTION VIEW

#### FLASHING AT HENRY TIE-BACK COVER

#### NOTES:

1. DETAIL SHOWS HENRY PRE-APPLIED WATERPROOFING SYSTEM FOR APPLICATIONS USING HENRY **BLUESKIN PRESEAL 320** OR **BLUESKIN PRESEAL 435**. SUBSTRATE SHOWN IS FOR REFERENCE ONLY.
2. HENRY **BLUESKIN PRESEAL 435** CAN BE INSTALLED DIRECTLY ONTO SHEET PILING. **BLUESKIN PRESEAL 320** REQUIRES A SMOOTH SURFACE SUCH AS PLYWOOD OR DRAINBOARD.
3. HENRY RECOMMENDS THE USE OF A DRAINBOARD IN NON-HYDROSTATIC CONDITIONS, OR AS A SUBSTRATE PREPARATION.
4. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET AND GUIDE SPECIFICATION FOR INSTALLATION PROCEDURES.

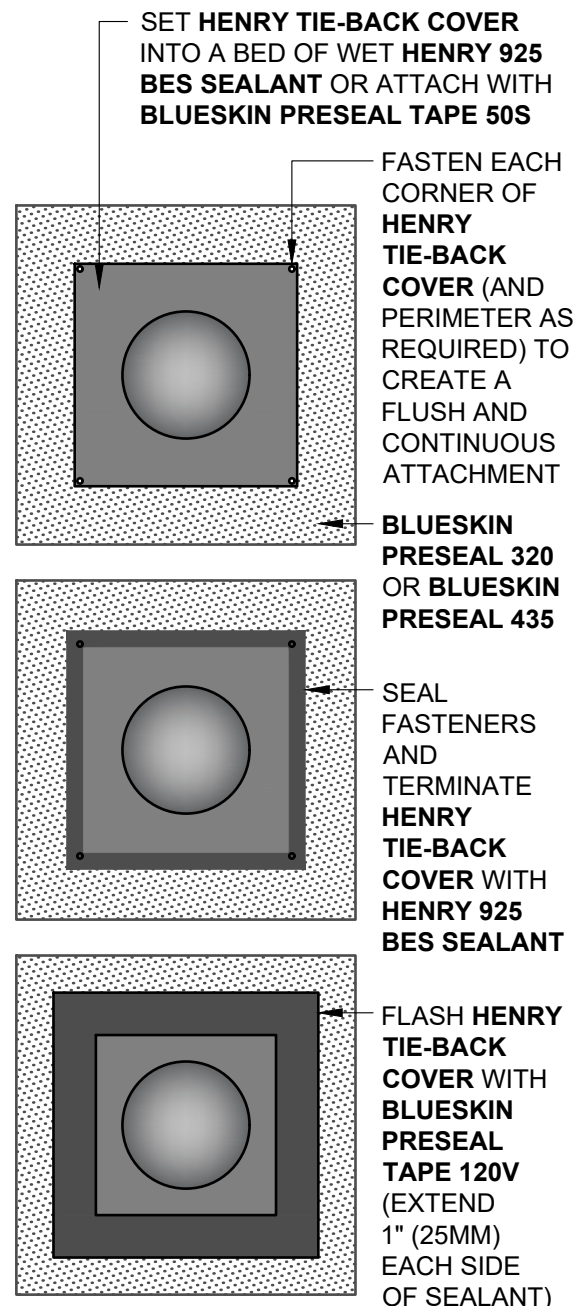

### ELEVATION VIEW

#### STEP-BY-STEP INSTRUCTIONS



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

#### HENRY PRE-APPLIED WATERPROOFING SYSTEM

### HENRY TIE-BACK COVER

**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**  
**HENRY TIE-BACK COVER**

SCALE: N.T.S.

11-06-2023

**BSPS-2A.2**