


**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**

PRE-APPLIED WATERPROOFING MEMBRANE SELVEDGE ADHESIVE

**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**  
PRE-APPLIED WATERPROOFING INSTALLATION GUIDELINES

1. REMOVE PLASTIC RELEASE AT SELVEDGE
2. OVERLAP SUBSEQUENT WATERPROOFING MEMBRANE AT SEAM.
3. FIRMLY PRESS MEMBRANE SEAM INTO PLACE AND ROLL WITH STEEL ROLLER TO ENSURE CONTINUOUS ADHESION.

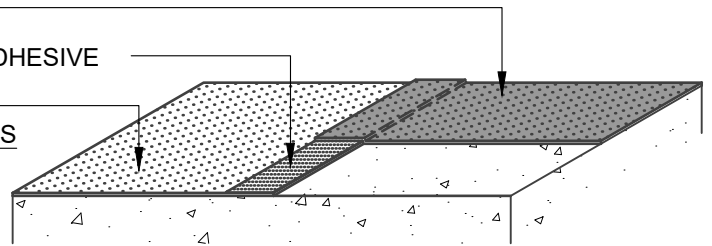


**1 PRE-APPLIED WATERPROOFING INSTALLED ONTO MEMBRANE SELVEDGE ADHESIVE**

**BLUESKIN PRESEAL TAPE 50S**

DOUBLE SIDED TAPE INSTALLATION GUIDELINES


1. REMOVE PLASTIC RELEASE LINER ON ONE SIDE OF DOUBLE SIDED TAPE AND ADHERE TO PRE-APPLIED WATERPROOFING EDGE.
2. FIRMLY PRESS TAPE INTO PLACE AND ROLL WITH STEEL ROLLER TO ENSURE CONTINUOUS ADHESION.

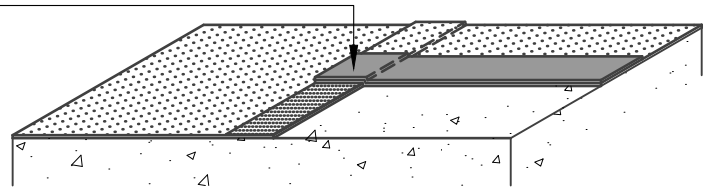

**2 BLUESKIN PRESEAL TAPE 50S DOUBLE SIDED TAPE**

**HENRY 925 BES SEALANT**

SEAL EDGE OF PRE-APPLIED WATERPROOFING SEAM WITH 1/8" BEAD OF **HENRY 925 BES SEALANT** AT MEMBRANE ADHESIVE SELVEDGE OVERLAP

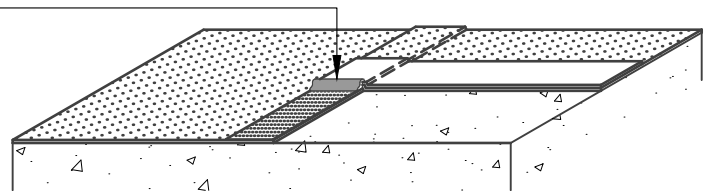


**3 SEAL EDGE OF PRE-APPLIED WATERPROOFING AT SELVEDGE**

**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**

PRE-APPLIED WATERPROOFING INSTALLATION GUIDELINES

1. REMOVE REMAINING PLASTIC RELEASE LINER ON TAPE.
2. OVERLAP SUBSEQUENT WATERPROOFING MEMBRANE AT SEAMS.
3. FIRMLY PRESS MEMBRANE SEAMS INTO PLACE AND ROLL WITH STEEL ROLLER TO ENSURE CONTINUOUS ADHESION.

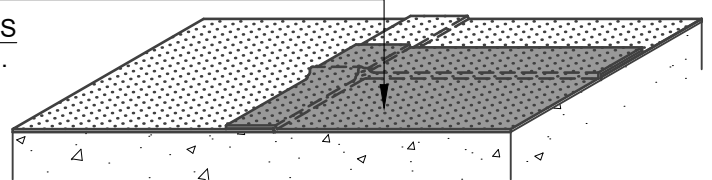


**4 PRE-APPLIED WATERPROOFING INSTALLED TO COMPLETE T-LAP SEAM**

**BLUESKIN PRESEAL TAPE 120V**

TAPE INSTALLATION GUIDELINES

1. REMOVE PLASTIC RELEASE LINER OF TAPE AND ADHERE TO PRE-APPLIED WATERPROOFING MEMBRANE SEAM INTERSECTION.
2. FIRMLY PRESS TAPE INTO PLACE AND ROLL WITH STEEL ROLLER TO ENSURE CONTINUOUS ADHESION.

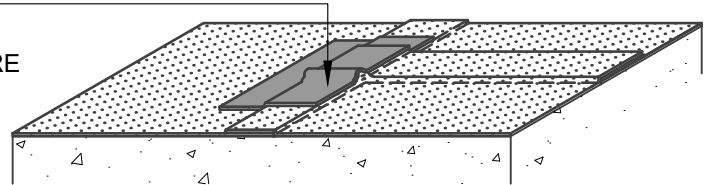

**5 BLUESKIN PRESEAL TAPE 120V TAPE AT MEMBRANE SEAMS**

NOTES:

1. DETAIL SHOWS HENRY PRE-APPLIED WATERPROOFING SYSTEM FOR APPLICATIONS USING HENRY **BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**. SUBSTRATE SHOWN IS FOR REFERENCE ONLY.
2. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET (TDS) AND GUIDE SPECIFICATION FOR INSTALLATION PROCEDURES.

**Henry**<sup>®</sup>

999 N. Pacific Coast Highway, Suite 800  
El Segundo, CA 90245  
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

**HENRY PRE-APPLIED WATERPROOFING SYSTEM**

**MEMBRANE SEAM OVERLAP**  
**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**  
**T-LAP AT WATERPROOFING MEMBRANE SEAMS**

SCALE: N.T.S.

11-20-2020

**BSPS-3C**