



INSTALL 2 PIECE TARGET FLASHING OVER FINGER FLASHING AS SHOWN IN STEPS 3A AND 3B TO PROMOTE WATER SHEDDING

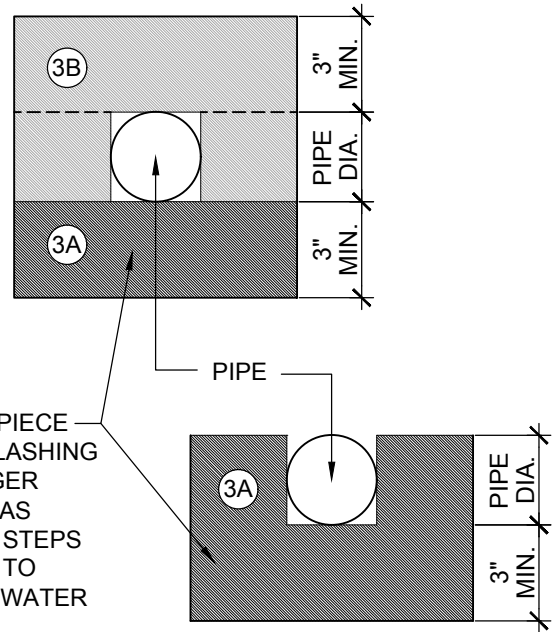

TARGET FLASHING TEMPLATE (TYPICAL)

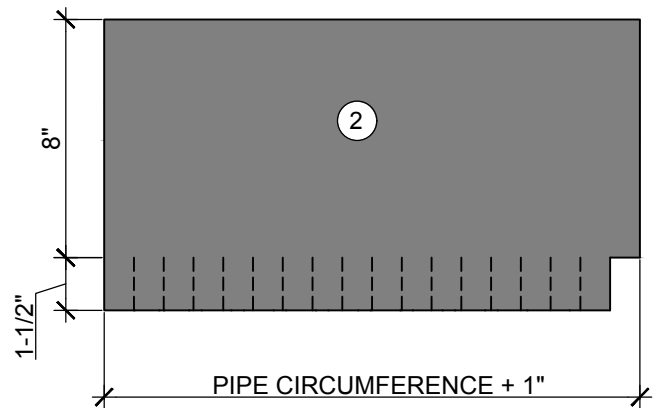

FINGER FLASHING TEMPLATE (TYPICAL)

- ① PRIMER (SEE NOTE #2)
- ② FINGER FLASHING (3A AND 3B): **BLUESKIN® WB25, BLUESKIN® WB OR BLUESKIN® BUTYL FLASH**
- ③ TARGET FLASHING: **BLUESKIN® WB25, BLUESKIN® WB OR BLUESKIN® BUTYL FLASH**
- ④ **BLUESKIN® VP100** (NOT FULLY SHOWN FOR CLARITY)

NOTES:

1. DETAIL SHOWS **BLUESKIN® VP100** ASSEMBLY INSTALLED OVER EXTERIOR GRADE SHEATHING. ACCEPTABLE SUBSTRATES INCLUDE PLYWOOD, OSB, CONCRETE, GYPSUM BOARD AND CONCRETE BLOCK.
2. RECOMMENDED PRIMERS/ADHESIVES INCLUDE: **BLUESKIN® LVC ADHESIVE, AQUATAC™ PRIMER OR BLUESKIN® ADHESIVE.**
3. INSULATION, CLADDING, AND OPTIONAL VAPOUR BARRIER NOT SHOWN FOR CLARITY.
4. REFER TO **BLUESKIN® VP100** INSTALLATION MANUAL FOR RECOMMENDED INSTALLATION PROCEDURES.

Henry®

999 Sepulveda Blvd., Suite 800
El Segundo, CA 90245
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY® DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

BLUESKIN® VP100 SELF-ADHERED WATER RESISTIVE AIR BARRIER

PIPE PENETRATION

SUBSTRATE GAPS UP TO 3/4" WIDE GAP MAXIMUM
SELF-ADHERED FLASHING - ISOMETRIC DETAIL

SCALE: N.T.S.

12-18-2017

BSVP100-2C1