
HENRY PRODEQ WATER CONTAINMENT SYSTEM WITH GEOTEXTILE SUBSTRATE PREPARATION SEQUENCE OF INSTALLATION

- (1) DECK/SUBSTRATE AS SPECIFIED
- (2) GEOTEXTILE SUBSTRATE PREPARATION (CONTACT HENRY FOR SECUREMENT RECOMMENDATIONS)
- (3) PRIMER (SEE NOTE #2)

(4) WATERPROOFING MEMBRANE: HENRY PRODEQ FX 600 OR HENRY PRODEQ FX 650 (100 MILS)

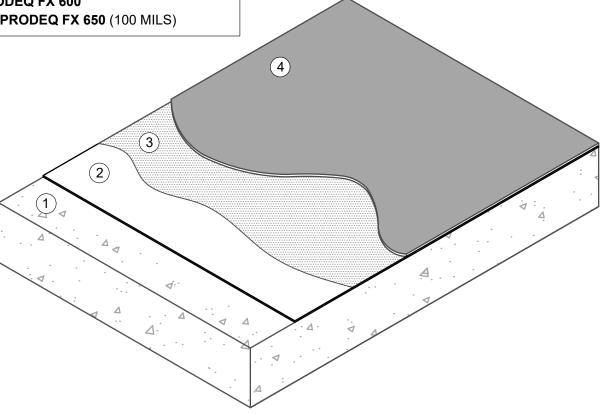

NOTES:

- DETAIL SHOWS HENRY PRODEQ WATER CONTAINMENT SYSTEM. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
- 2. THE STANDARD PRIMER FOR THE HENRY **PRODEQ** WATER CONTAINMENT SYSTEM IS **HENRY GC EPOXY PRIMER**. OTHER RECOMMENDED PRIMER(S) INCLUDE: **HENRY ST PRIMER** WITH AGGREGATE. REFER TO PRODUCT SPECIFIC DATA SHEET FOR PRODUCT SPECIFIC INFORMATION.
- 3. DO NOT INSTALL PRODEQ WATER CONTAINMENT SYSTEM BEYOND PRIMED SURFACES.
- 4. REFER TO **PRODEQ** WATER CONTAINMENT SYSTEM GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

PRODEQ SYSTEM - WATER CONTAINMENT SYSTEM

SYSTEM DETAIL

TYPICAL PRODEQ WATER CONTAINMENT SYSTEM PRODEQ FX 600 OR PRODEQ FX 650 AND GEOTEXTILE

SCALE: N.T.S.

06-17-2022

PDEQ-CS-A2

999 N. Pacific Coast Highway, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com