


**HENRY PRODEQ SYSTEM  
SEQUENCE OF INSTALLATION**

- ① DECK/SUBSTRATE AS SPECIFIED
- ② PRIMER (SEE NOTE #2)
- ③ WATERPROOFING MEMBRANE:  
**HENRY PRODEQ FX 400** (100 MILS)

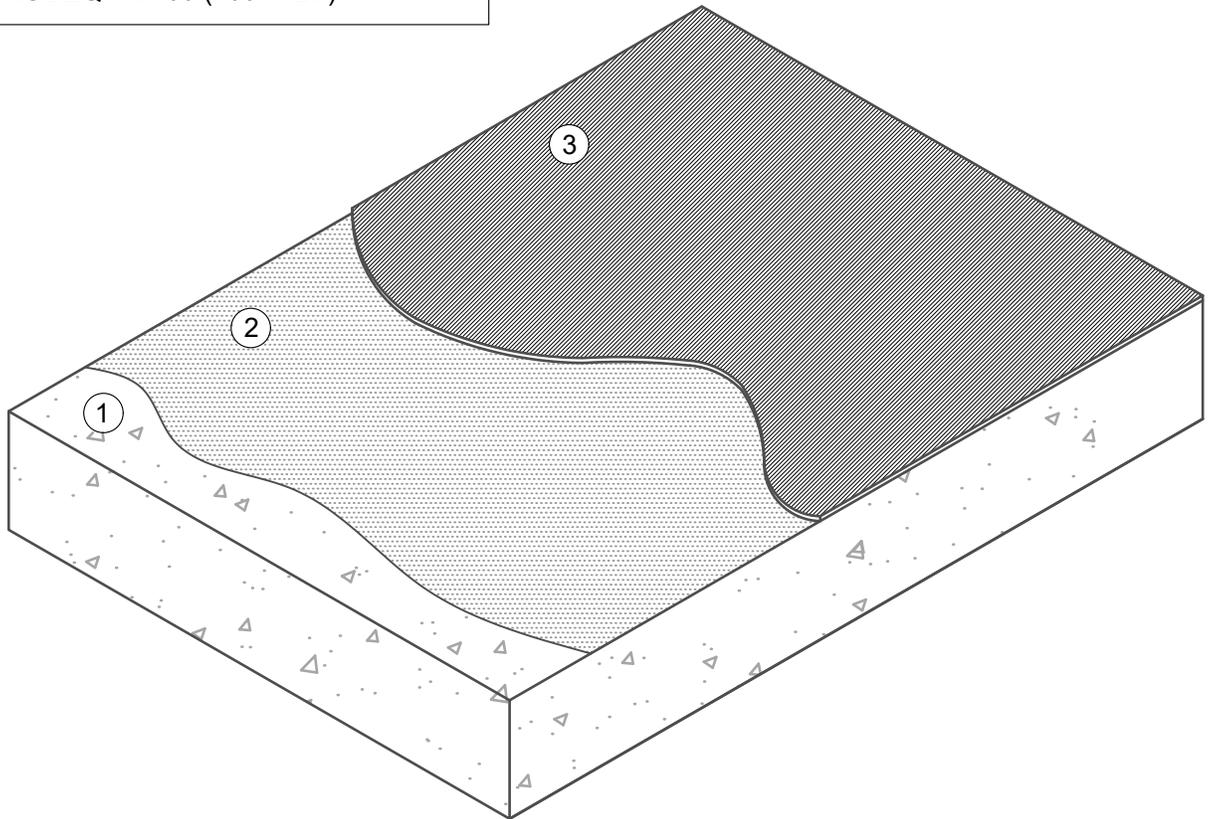

**NOTES:**

1. DETAIL SHOWS HENRY **PRODEQ** SYSTEM WATERPROOFING ASSEMBLY. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
2. THE STANDARD PRIMER FOR THE HENRY **PRODEQ** SYSTEM IS **HENRY ST PRIMER** WITH AGGREGATE. OTHER RECOMMENDED PRIMERS INCLUDE: **HENRY LV PRIMER**, **HENRY STXL PRIMER** WITH AGGREGATE, **PUMADEQ PRIMER 20** WITH AGGREGATE AND **HENRY GC EPOXY PRIMER**. REFER TO PRODUCT SPECIFIC DATA SHEET FOR PRODUCT SPECIFIC INFORMATION.
3. REFER TO DETAILS PRODEQ-WB, PRODEQ-WC, OR PRODEQ-WD FOR LONG-TERM COLOR STABILITY, HEAVY CONSTRUCTION TRAFFIC OR ASSEMBLIES WHERE OVERBURDEN BONDS DIRECTLY TO **PRODEQ** SYSTEM .
4. PREPARE AND PRIME VERTICAL SUBSTRATES A MINIMUM 2" (50MM) BEYOND **PRODEQ** SYSTEM APPLICATION IN ACCORDANCE WITH HENRY **PRODEQ** SYSTEM SUBSTRATE PREPARATION GUIDELINES TECH-TALK BULLETIN.
5. DO NOT INSTALL **PRODEQ** SYSTEM BEYOND PRIMED SURFACES.
6. HENRY OFFERS PAVERS, RIGID INSULATION, AND PREFABRICATED DRAINAGE COMPOSITES AS A SINGLE SOURCE WARRANTY OPTION PER PROJECT SPECIFIC REQUIREMENTS (NOT SHOWN FOR CLARITY). CONTACT HENRY FOR SYSTEM CONFIGURATIONS AND WARRANTY OPTIONS.
7. REFER TO **PRODEQ** SYSTEM GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.



A **CARLISLE** COMPANY

999 N. Pacific Coast Highway, Suite 800  
El Segundo, CA 90245  
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

**PRODEQ SYSTEM - WATERPROOFING ASSEMBLY**

**SYSTEM DETAIL**

**TYPICAL PRODEQ SYSTEM  
NO WEAR COAT OR COLOR STABLE TOP COAT**

SCALE: N.T.S. | 06-17-2022

**PRODEQ-WA**