


**PUMADEQ™ SYSTEM WATERPROOFING ASSEMBLY
WITH A REINFORCED FIELD MEMBRANE
SEQUENCE OF INSTALLATION**

- ① DECK/SUBSTRATE AS SPECIFIED
- ② **PUMADEQ™ PRIMER 20 OR HENRY® GC PRIMER**
- ③ REINFORCED PUMA FIELD MEMBRANE:
 3A - **PUMADEQ™ FLEX 30SL (50 MILS)**
 3B - **PUMADEQ™ N-FLEECE REINFORCEMENT**
 3C - **PUMADEQ™ FLEX 30SL (30 MILS)**

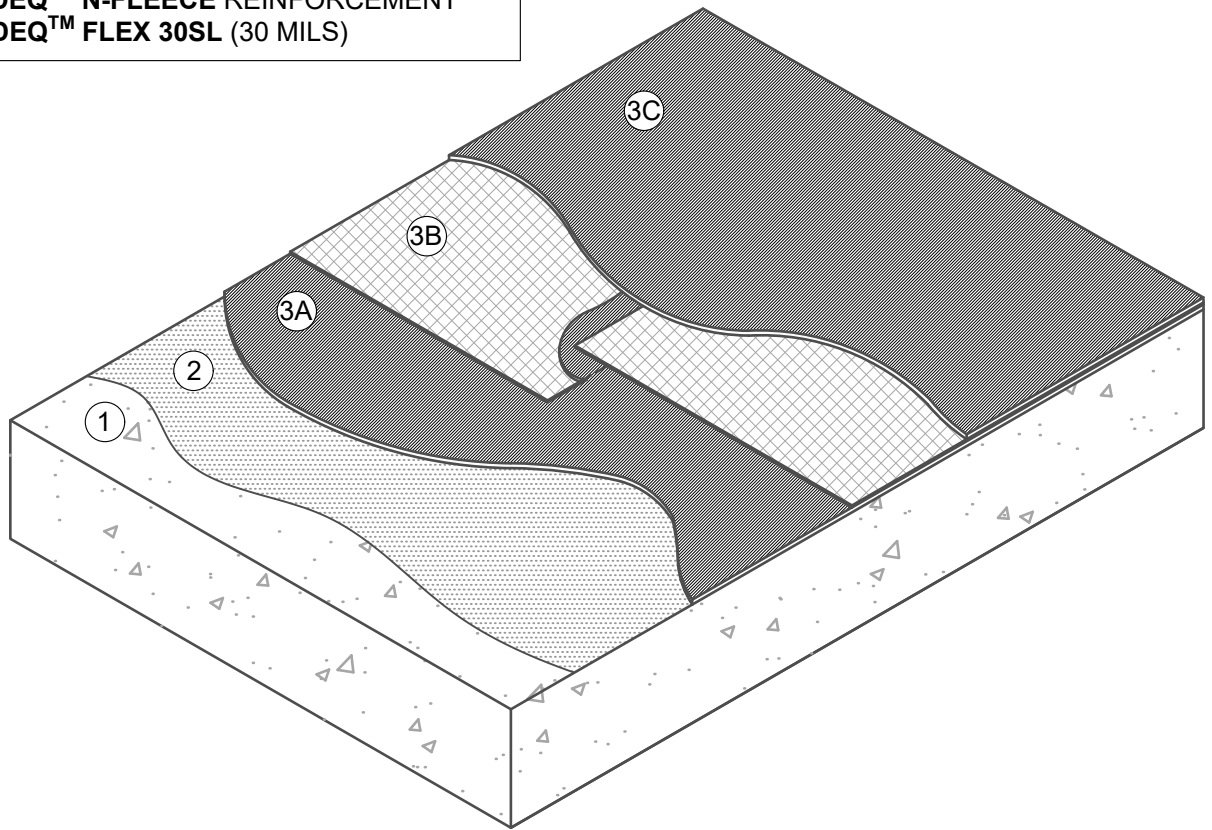

NOTES:

1. DETAIL SHOWS HENRY® **PUMADEQ™** SYSTEM WATERPROOFING ASSEMBLY WITH A REINFORCED FIELD MEMBRANE. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
2. REFER TO DETAILS PUMADEQ-WB, PUMADEQ-WC, OR PUMADEQ-WD FOR LONG-TERM COLOR STABILITY, HEAVY CONSTRUCTION TRAFFIC OR ASSEMBLIES WHERE OVERBURDEN BONDS DIRECTLY TO **PUMADEQ™** SYSTEM .
3. PREPARE AND PRIME VERTICAL SUBSTRATES A MINIMUM 2" BEYOND **PUMADEQ™** SYSTEM APPLICATION IN ACCORDANCE WITH HENRY® **PUMADEQ™** SYSTEM SUBSTRATE PREPARATION GUIDELINES TECH-TALK BULLETIN.
4. DO NOT INSTALL **PUMADEQ™** SYSTEM BEYOND PRIMED SURFACES.
5. HENRY® OFFERS PAVERS, RIGID INSULATION, AND PREFABRICATED DRAINAGE COMPOSITES AS A SINGLE SOURCE WARRANTY OPTION PER PROJECT SPECIFIC REQUIREMENTS (NOT SHOWN FOR CLARITY). CONTACT HENRY® FOR SYSTEM CONFIGURATIONS AND WARRANTY OPTIONS.
6. REFER TO **PUMADEQ™** SYSTEM GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.

Henry®

999 N. Pacific Coast Highway, Suite 800
El Segundo, CA 90245
800-486-1278 • www.henry.com

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY® DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

PUMADEQ™ SYSTEM - WATERPROOFING ASSEMBLY

SYSTEM DETAIL

**REINFORCED FIELD MEMBRANE
SURFACE PROFILES CSP 3-5**

SCALE: N.T.S.

04-26-2019

PUMADEQ-WA