
PUMADEQ[™] SYSTEM WATERPROOFING ASSEMBLY WITH A REINFORCED FIELD MEMBRANE SEQUENCE OF INSTALLATION

- (1) DECK/SUBSTRATE AS SPECIFIED
- (2) PUMADEQTM PRIMER 20 OR HENRY® GC PRIMER
- (3) REINFORCED PUMA FIELD MEMBRANE:

 - 3A PUMADEQTM FLEX 30SL (50 MILS)
 3B PUMADEQTM N-FLEECE REINFORCEMENT
 3C PUMADEQTM FLEX 30SL (30 MILS)
- (4) COLOR STABLE TOP COAT:

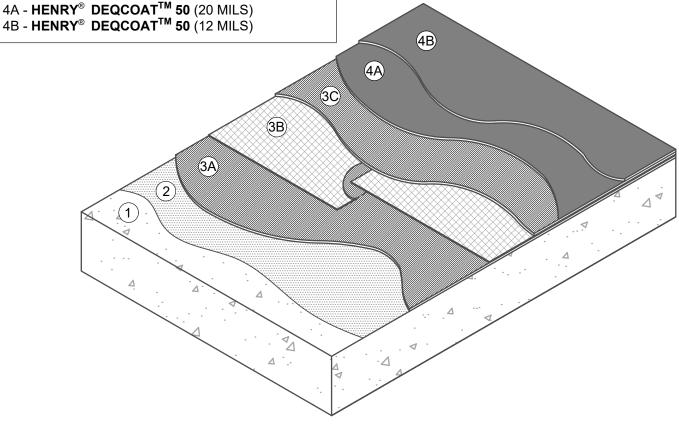

NOTES:

- DETAIL SHOWS HENRY[®] **PUMADEQ[™]** SYSTEM WATERPROOFING ASSEMBLY WITH A REINFORCED FIELD MEMBRANE. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
- PREPARE AND PRIME VERTICAL SUBSTRATES A MINIMUM 2" BEYOND **PUMADEQ**TM SYSTEM APPLICATION IN ACCORDANCE WITH HENRY PUMADEQTM SYSTEM SUBSTRATE PREPARATION GUIDELINES TECH-TALK BULLETIN.
- DO NOT INSTALL **PUMADEQTM** SYSTEM BEYOND PRIMED SURFACES.
- HENRY® OFFERS PAVERS, RIGID INSULATION, AND PREFABRICATED DRAINAGE COMPOSITES AS A SINGLE SOURCE WARRANTY OPTION PER PROJECT SPECIFIC REQUIREMENTS (NOT SHOWN FOR CLARITY). CONTACT HENRY® FOR SYSTEM CONFIGURATIONS AND WARRANTY OPTIONS.
- REFER TO **PUMADEQ™** SYSTEM GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY $^{\otimes}$ DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

PUMADEQ[™] SYSTEM - WATERPROOFING ASSEMBLY

SYSTEM DETAIL

REINFORCED FIELD MEMBRANE ON SURFACE PROFILES CSP 3-5 - COLOR STABLE TOP COAT SCALE: N.T.S.

04-26-2019

PUMADEQ-WB

999 N. Pacific Coast Highway, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com