


VEGETATIVE FREE ZONE EXAMPLE AT ROOF EDGE

N.T.S

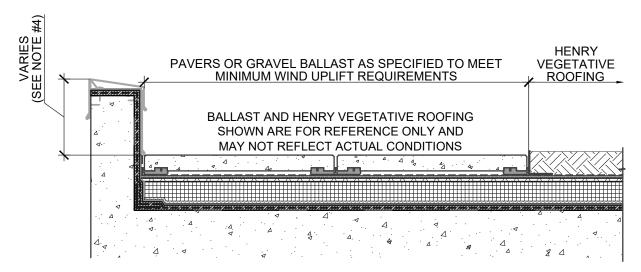

VEGETATIVE FREE ZONE EXAMPLE AT PARAPET

N.T.S

NOTES:

- DETAIL SHOWS HENRY VEGETATIVE ROOFING WITH HENRY 790-11/790-11EV WATERPROOFING/ROOFING ASSEMBLY. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
- 2. DEPTH OF GROWING MEDIA MAY VARY DEPENDING ON PROJECT SPECIFIC REQUIREMENTS.
- 3. EDGE DETAIL NOT APPLICABLE FOR ALL BUILDING TYPES OR REGIONS. BUILDING MAY REQUIRE PARAPET AND/OR PAVER STRAPS TO MEET MINIMUM WIND UPLIFT REQUIREMENTS.
- 4. DETAIL IS FOR REFERENCE ONLY. REFER TO DESIGN PROFESSIONAL TO VERIFY WIND UPLIFT MINIMUM REQUIREMENTS.
- 5. REFER TO THE VEGETATIVE ROOFING GUIDE SPECIFICATION FOR RECOMMENDED INSTALLATION PROCEDURES.



DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR

VEGETATIVE ROOFING - HENRY 790-11/790-11EV

VEGETATIVE FREE ZONE

EXAMPLE OF POSSIBLE PARAPET /ROOF EDGE CONDITIONS AT A VEGETATIVE ROOFING

SCALE: N.T.S.

06-01-2020

VR-790-11-3

999 N. Pacific Coast Hwy, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com