


## PARAPET TERMINATION

N.T.S

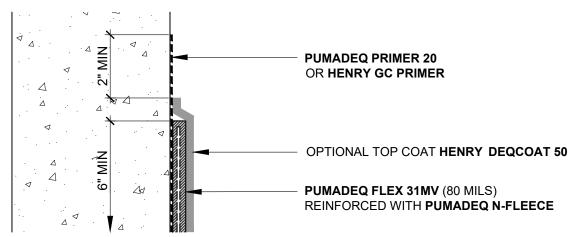

### VERTICAL TERMINATION

N.T.S

#### NOTES:

- DETAIL SHOWS HENRY VEGETATIVE ROOFING WITH PUMADEQ SYSTEM WATERPROOFING ASSEMBLY WITH A REINFORCED FIELD MEMBRANE. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
- 2. DO NOT INSTALL PUMADEQ SYSTEM BEYOND PRIMED SURFACES.
- 3. BACK COAT FLEECE ON VERTICAL SURFACES WITH PUMADEQ RESIN.
- 4. DEPTH OF GROWING MEDIA MAY VARY DEPENDING ON PROJECT SPECIFIC REQUIREMENTS.
- 5. DETAIL IS FOR REFERENCE ONLY. REFER TO DESIGN PROFESSIONAL TO VERIFY WIND UPLIFT REQUIREMENTS.
- REFER TO THE **PUMADEQ** SYSTEM GUIDE SPECIFICATION AND WATERPROOFING DETAILS FOR RECOMMENDED INSTALLATION PROCEDURES.



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

## **VEGETATIVE ROOFING - PUMADEQ SYSTEM**

# **TERMINATION OPTIONS**

REINFORCED FIELD MEMBRANE (CSP 3-5) VERTICAL TERMINATION OPTIONS

SCALE: N.T.S.

06-01-2020

VR-PUMA-R6

999 N. Pacific Coast Hwy, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com