


## **VEGETATIVE FREE ZONE EXAMPLE AT ROOF EDGE**

N.T.S

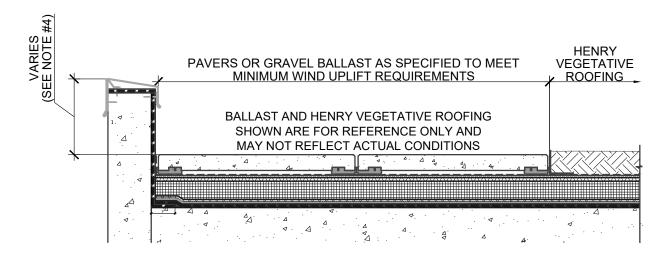

## **VEGETATIVE FREE ZONE EXAMPLE AT PARAPET**

#### NOTES:

N.T.S

- 1. DETAIL SHOWS HENRY VEGETATIVE ROOFING WITH **PUMADEQ** SYSTEM WATERPROOFING ASSEMBLY WITH AN UNREINFORCED FIELD MEMBRANE. SUBSTRATE SHOWN IS FOR REFERENCE ONLY. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET FOR AUTHORIZED SUBSTRATES.
- 2. SURFACE PROFILES MUST MEET ICRI CSP 3-4. IF CSP 5, REFER TO REINFORCED **PUMADEQ** SYSTEM DETAILS.
- 3. EDGE DETAIL NOT APPLICABLE FOR ALL BUILDING TYPES OR REGIONS. BUILDING MAY REQUIRE PARAPET AND/OR PAVER STRAPS TO MEET MINIMUM WIND UPLIFT REQUIREMENTS.
- 4. DO NOT INSTALL PUMADEQ SYSTEM BEYOND PRIMED SURFACES.
- 5. BACK COAT FLEECE ON VERTICAL SURFACES WITH **PUMADEQ** RESIN.
- 6. DEPTH OF GROWING MEDIA MAY VARY DEPENDING ON PROJECT SPECIFIC REQUIREMENTS.
- 7. DETAIL IS FOR REFERENCE ONLY. REFER TO DESIGN PROFESSIONAL TO VERIFY WIND UPLIFT REQUIREMENTS.
- 8. REFER TO THE **PUMADEQ** SYSTEM GUIDE SPECIFICATION AND WATERPROOFING DETAILS FOR RECOMMENDED INSTALLATION PROCEDURES.



MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

### **VEGETATIVE ROOFING - PUMADEQ SYSTEM**

# **VEGETATIVE FREE ZONE**

EXAMPLE OF POSSIBLE PARAPET /ROOF EDGE CONDITIONS AT A VEGETATIVE ROOFING

SCALE: N.T.S.

06-01-2020

VR-PUMA-U3

999 N. Pacific Coast Hwy, Suite 800 El Segundo, CA 90245 800-486-1278 • www.henry.com