


1. Deck
2. Primer
3. 790-11 Membrane (90 mils)
4. Polyfab Reinforcement
5. 790-11 Membrane (125 mils)
6. Separation Layer (G 100 s/s)
7. Geocomposite Drainage Layer (DB 650)
8. Pavers on Pedestals

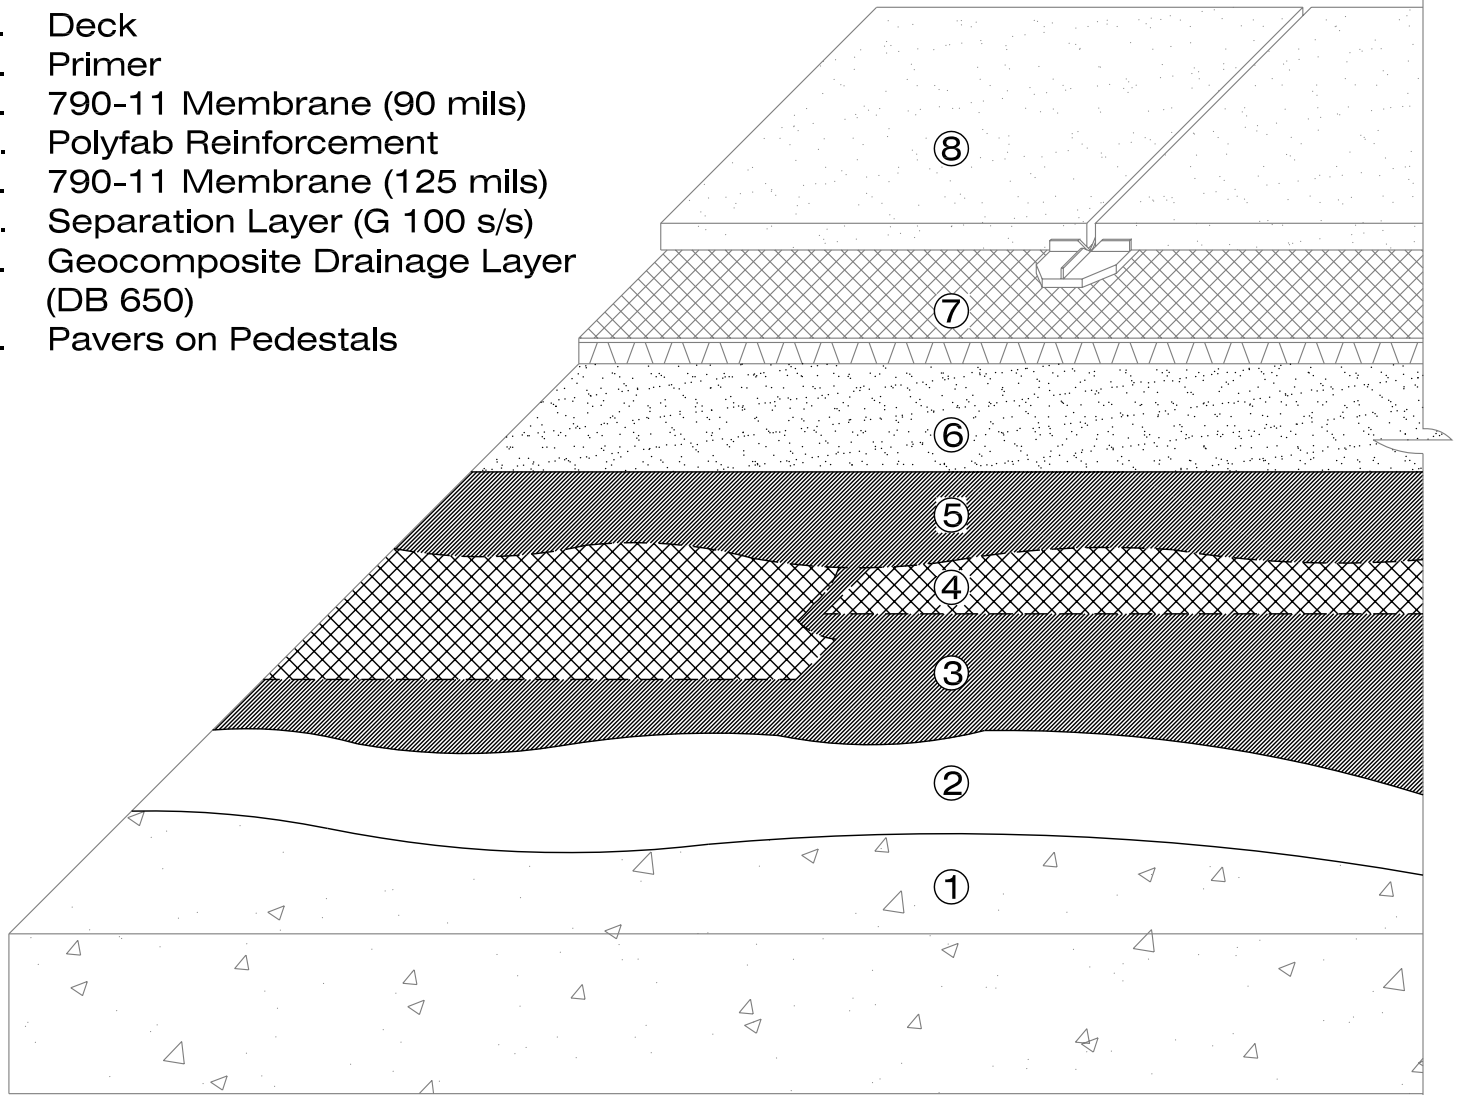

Notes:

1. System detail showing a reinforced, two ply 790-11 hot applied rubberized asphalt waterproofing system incorporating a prefabricated drainage geocomposite and paver system.
2. There are two types of primers for 790-11; 910-01, an asphalt penetrating primer and 930-18, a polymer modified primer. Superior membrane to deck adhesion is provided when 930-18 primer is used.
3. A separation layer is recommend when using prefabricated geocomposite drainage systems.

Henry
COMPANY®

790-11 WATERPROOFING

SCALE: N.T.S.

UNINSULATED PLAZA DECK W/ PAVERS

FIT TO PAPER

**SYSTEM
DETAIL**

WP-H102