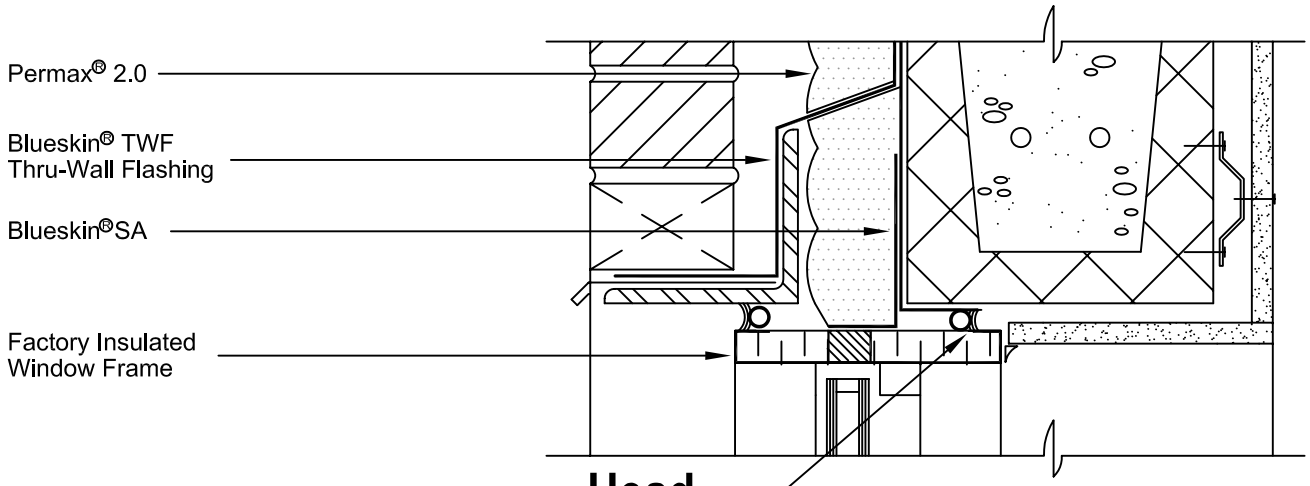

Head

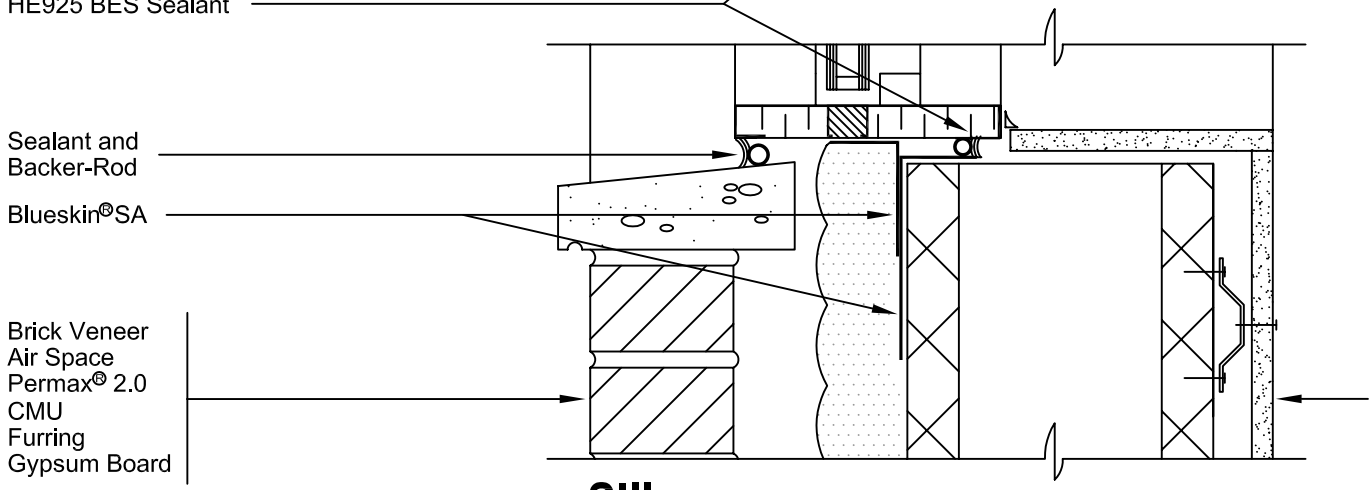

Sill

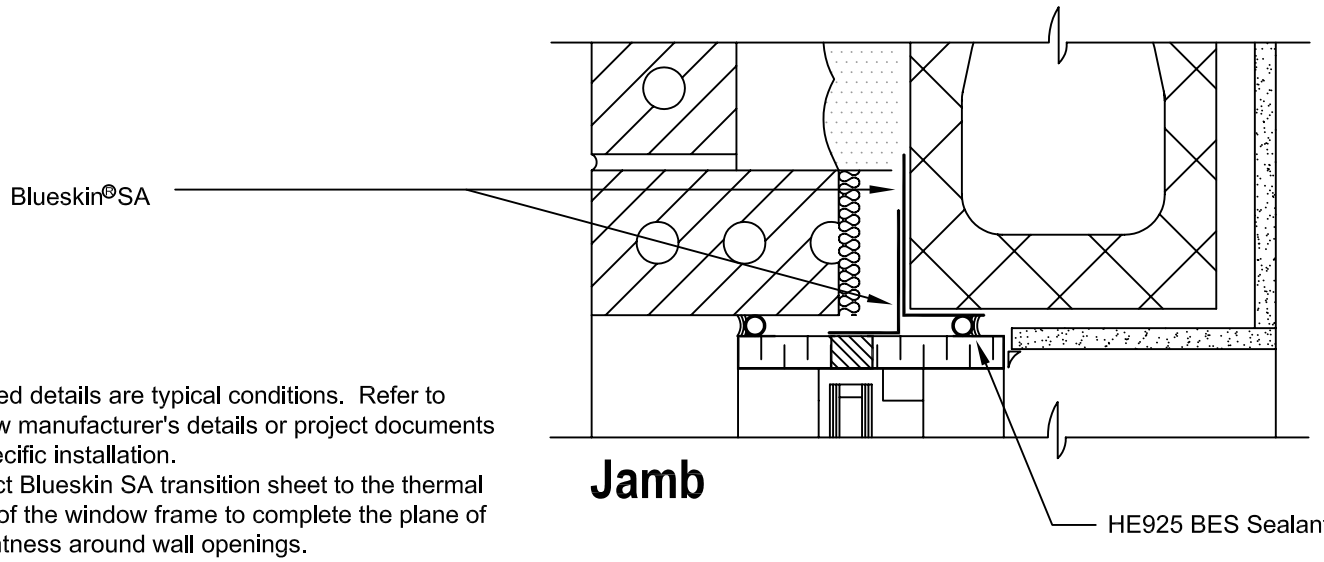

Jamb

Note:

1. Depicted details are typical conditions. Refer to window manufacturer's details or project documents for specific installation.
2. Connect Blueskin SA transition sheet to the thermal break of the window frame to complete the plane of air tightness around wall openings.

Henry COMPANY®
www.henry.com

PERMAX 2.0 SPRAY POLYURETHANE FOAM INSULATION	SCALE: N.T.S.
BRICK VENEER / CONCRETE BLOCK WALL	06-15-10
WINDOW A DETAILS	ABRT-9B10